


**PUBLISHED BY  
NATIONAL SCALE MEN'S ASSOCIATION**

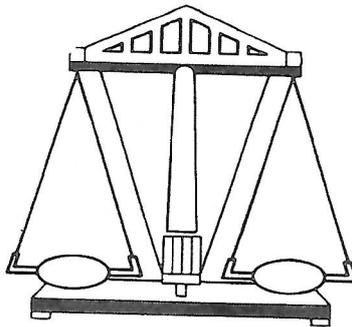

**DEDICATED TO THE MEMORY  
OF  
WILLIAM A. LYNN**

## FOREWORD


**This SCALEMAN'S HANDBOOK OF METROLOGY has been prepared by the NSMA SCALEMAN'S HANDBOOK COMMITTEE. Comments, suggestions, and recommendations are encouraged, and will be considered during periodic editorial reviews. Comments should be addressed to the SCALEMAN'S HANDBOOK COMMITTEE in care of the NSMA national office at**

**800 South Milwaukee Avenue  
Suite 101  
Libertyville, Illinois 60048**

**The NATIONAL SCALE MEN'S ASSOCIATION has sponsored this Handbook as a service to members, and in support of the Association's continuing emphasis on education.**

© 1980 by the National Scale Men's Association  
Libertyville IL

All rights reserved. No part of this book may be reproduced in any form or by any means without permission in writing from the National Scale Men's Association.

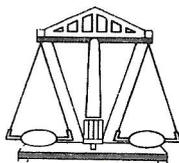

Printed in the United States of America

## CREDITS

The NATIONAL SCALE MEN'S ASSOCIATION is grateful to the following organizations for their assistance in compiling and preparing this SCALEMAN'S HANDBOOK OF METROLOGY.

**ACME SCALE & SUPPLY COMPANY**  
Pittsburgh, Pennsylvania

**A.H. EMERY COMPANY**  
New Canaan, Connecticut

**ALLEGHENY TECHNOLOGY, INC.**  
Cumberland, Maryland

**ANALOGIC CORPORATION**  
Wakefield, Massachusetts

**BLH ELECTRONICS**  
Waltham, Massachusetts

**D. J. INSTRUMENTS, INC.**  
North Billerica, Massachusetts

**EATON CORPORATION**  
Controls Division  
Carol Stream, Illinois

**ELDEC CORPORATION**  
Lynnwood, Washington

**ELECTRONIC SCALE COMMITTEE, NSMA**  
Naperville, Illinois

**ELECTROSCALE CORPORATION**  
Santa Rosa, California

**JOHN M. GEISSER COMPANY**  
North Scituate, Rhode Island

**MARTIN-DECKER COMPANY**  
Santa Ana, California

**MERRICK SCALE MANUFACTURING COMPANY, INC.**  
Passaic, New Jersey

**NATIONAL BUREAU OF STANDARDS**  
Washington, D.C.

**NATIONAL CONTROLS, INC.**  
Santa Rosa, California

**PENNSYLVANIA SCALE COMPANY**  
Leola, Pennsylvania

**RAMSEY ENGINEERING COMPANY**  
St. Paul, Minnesota

**SENSOR DEVELOPMENTS, INC.**  
Lake Orion, Minnesota

**THURMAN SCALE COMPANY**  
Columbus, Ohio

**TOLEDO SCALE, DIVISION OF RELIANCE ELECTRIC**  
Columbus, Ohio

**TRANSDUCERS, INC.**  
Cerritos, California

**WEIGHING AND MEASUREMENT**  
David M. Mathieu, Editor/Publisher  
Rockford, Illinois

**WEIGH-TRONIX, INC.**  
Fairmont, Minnesota

# TABLE OF CONTENTS

## CHAPTER 1

SECTION		PAGE
1.0	Principles of Mechanical Weighing	1-1
1.1	Introduction	1-1
1.2	Principles of Levers	1-1
1.3	The Lever	1-1
1.4	Sensitivity	1-3
1.5	Points of Pressure	1-3
1.6	Scale Design	1-7
1.7	Ratio-Multiple	1-7
1.8	Figuring Lever Multiples	1-7
1.9	Total Multiple	1-8
1.10	Levers in Parallel	1-10
1.11	How to Correct Excessive Multiple Errors	1-12
1.12	One Scale Out of Two	1-13
1.13	Obtaining Total Multiple of Understanding Without Measuring Pivot Distances.....	1-15
1.14	Tip Multiple	1-15
1.15	"Dead Load Pull"	1-15
1.16	Calibrated Nose Iron Adjustment	1-16
1.17	How Construction of a Lever Affects Sensitivity	1-16
1.18	Friction	1-21
1.19	Pivots and Bearings	1-21
1.20	Avoidable Friction-Maintenance of Friction Points	1-23
1.21	Dash Pots	1-29
1.22	Indicating Devices	1-30
1.23	The Beam	1-30
1.24	Dial Indicator	1-31
1.25	The CAM and the Pendulum	1-31

## CHAPTER 1

### SECTION II

1.2.0	Mechanical Scales, Repairs and Adjustments	1-35
1.2.1	Even Balance Scales	1-35
1.2.2	Dampers (Dashpots)	1-39
1.2.3	Steelyards	1-41
1.2.4	The Portable Beam Scale	1-41
1.2.5	Repairing a Portable Beam Scale	1-42
1.2.6	Counting Scales	1-45
1.2.7	"All Ratio" Counting Scales	1-46
1.2.8	Repair/Adjust "All Ratio" Counting Scales	1-47
1.2.9	Dormant Scales - Repair	1-48
1.2.10	Industrial Scales	1-49
1.2.11	Motor Truck Scales	1-49
1.2.12	Repair/Adjust a Motor Truck Scale	1-52
1.2.13	Repair/Adjust the Beam Indicator	1-54
1.2.14	Install/Adjust Motor Truck Scales	1-56
1.2.15	Adjustment - Straight Lever M, T, Scale	1-56
1.2.16	Install/Adjust a Torsion Lever Motor Truck Scale	1-57

SECTION		PAGE
1.2.17	Automatic Weight Indication	1-57
1.2.18	Fan Type Dial Scales	1-57
1.2.19	Adjustments	1-59
1.2.20	Fan Type Ratio Counting Scales	1-60
1.2.21	Adjustments	1-61
1.2.22	Weightograph Type Scales	1-62
1.2.23	Repair/Adjust Weightographs	1-62
1.2.24	Self-Contained Weightographs	1-64
1.2.25	Cabinet Weightograph	1-66
1.2.26	Adjust/Cabinet Weightograph	1-67
1.2.27	Round Faced Dial Scales	1-68
1.2.28	Triner, Lindel, Stathmos, Old Style Toledo Scale	1-70
1.2.29	Adjustments	1-70
1.2.30	Swivel Adjustments	1-70
1.2.31	Cabinet Dials	1-71
1.2.32	New Style Toledo Dial Scale	1-72
1.2.33	The Out of Level Test	1-73
1.2.34	Full Capacity	1-73
1.2.35	Adjust Half Capacity	1-73
1.2.36	Adjust First Quarter	1-74
1.2.37	Adjust Third Quarter	1-74
1.2.38	New Toledo Cabinet Dials	1-74
1.2.39	Replacing Fulcrum Plates	1-74
1.2.40	Old Style Fairbanks-Morse Dial Scale	1-74
1.2.41	New Style Fairbanks-Morse Dial Scale	1-75
1.2.42	Swivel Adjustments	1-75
1.2.43	Adjustments for Out of Level Condition	1-75
1.2.44	Tare and Capacity Bar Parallel Adjustments	1-75
1.2.45	Howe Tape Drive Dial	1-76
1.2.46	Adjustments	1-76
1.2.47	Tape Drive Cabinet Dials	1-77
1.2.48	Detecto Dials	1-78
1.2.49	Drum Type Computing Scales	1-78
1.2.50	Spring Scales	1-78

## CHAPTER 2

2.0	Scales, Systems and Troubleshooting	2-1
2.1	Introduction	2-1
2.2	Description	2-2
2.3	Indicator	2-2
2.4	Load Cell	2-2
2.5	Hydraulic Hose	2-2
2.6	Quick Disconnects	2-4
2.7	Tubing	2-4
2.8	Attaching and Support Hardware	2-4
2.9	Installation and Operation	2-4
2.10	Installation	2-4
2.11	Pre-Installation	2-4
2.12	System Installation	2-4
2.13	Load Cell Installation	2-4
2.14	Compression Load Cell in a Lever Application	2-5
2.15	Indicator Installation	2-5

SECTION		PAGE
2.17	Post-Installation Checkout	2-6
2.18	System Operation	2-6
2.19	Load Pointer Zero Adjustment	2-6
2.20	Pointer Damping Adjustment	2-6
2.21	System Accuracy Check	2-6
2.22	System Weight Test	2-6
2.23	Weight Test	2-6
2.24	Volume Chamber	2-6
2.25	Maintenance and Troubleshooting	2-7
2.26	Maintenance	2-7
2.27	General	2-7
2.28	Troubleshooting	2-7
2.29	Load Cell Gap	2-7
2.30	Repair	2-8
2.31	Component Repair	2-8
2.32	Gauge Disassembly	2-8
2.33	Gauge Calibration Procedure	2-10
2.34	Gauge Damper Seal Replacement	2-12
2.35	Lubrication	2-13
2.36	Reassembly	2-13
2.37	Charging and Bleeding System	2-13
2.38	Fluid Addition to System	2-13
2.39	Hydraulic Fluid Reduction	2-14
2.40	Load Cell Disassembly	2-15
2.41	Cleaning	2-15
2.42	Inspection	2-15
2.43	Repair or Replacement	2-15
2.44	General	2-15
2.45	Diaphragm Replacement	2-15

### CHAPTER 3

3.0	Theory of Electronic Weighing	3-1
3.1	Introduction	3-1
3.2	Strain Measurement	3-1
3.3	Wheatstone Bridge	3-1
3.4	Load Cell or Load Transducer	3-4
3.5	Load Beams	3-4
3.6	Mechanical Installation	3-4
3.7	Electrical Installation	3-5
3.8	Operation	3-5
3.9	Temperature Range	3-5
3.10	Load	3-5
3.11	Calibration	3-5
3.12	Maintenance	3-6
3.13	Troubleshooting	3-6
3.14	Accuracy/Resolution	3-6
3.15	Accuracy	3-6
3.16	Resolution	3-7
3.17	Conclusion	3-7
3.18	Why Electronic Weighing	3-7
3.19	Linear Variable Differential Transformer (LVDT)	
3.20	Understanding the LVDT	3-8

SECTION		PAGE
3.21	Checkweighing with Individual Set Points	3-9
3.22	Bench and Counting Scales	3-9
3.23	Typical Specifications	3-10
3.24	Principles of Operation	3-10
3.25	Microprocessor Computation Procedures	3-10
3.26	Factors Affecting Accuracy	3-12
3.27	Mechanical Scales Converted to Electronic	3-12
3.28	Low Profile and Deck Scales	3-13
3.29	Environmental Considerations	3-14
3.30	Load Limits	3-14
3.31	Electrical Installation	3-15
3.32	Troubleshooting	3-15

### CHAPTER 3

#### SECTION II

3.2.0	Rail Car Weighing	3-19
3.2.1	Introduction	3-19
3.2.2	Construction	3-19
3.2.3	Area Preparation/Installation	3-19
3.2.4	Motor Truck Scales	3-21
3.2.5	Load Cell/Link Arrangement	3-24
3.2.6	Preventive Maintenance	3-24
3.2.7	Maintenance	3-24
3.2.8	Pitless Motor Truck Scales	3-26
3.2.9	Theory of Operation	3-26
3.2.10	Flexure Platform Scales	3-27
3.2.11	Versatility in Selection	3-27
3.2.12	Low Profile Floor Scales	3-28
3.2.13	In-transit Weighing - Belt Conveyers	3-28
3.2.14	Design Considerations	3-28
3.2.15	Types of Weighbridge Suspensions	3-29
3.2.16	Calibration Considerations	3-29
3.2.17	Scale Maintenance	3-30
3.2.18	Preventive Maintenance	3-31
3.2.19	A Tremendous Loss	3-31
3.2.20	The Effect of Dead Load and Tare on Scale Performance	3-32
3.2.21	Crane Scales	3-33
3.2.22	Truck Scales	3-35
3.2.23	Platform and Axle Scales	3-36
3.2.24	Low Capacity Scales	3-36
3.2.25	Analog Tare vs. Auto Tare	3-37
3.2.26	Overload Protection in Electronic Weighing Systems	3-37
3.2.27	Application Data	3-41
3.2.28	Load Beam Installation	3-41
3.2.29	Single End Mountings	3-41
3.2.30	Load Beam Resilient Compression Mounting	3-42
3.2.31	Beams used with Tension Devices	3-42
3.2.32	Mounting Double Ended Load Beams	3-43

## CHAPTER 4

SECTION		PAGE
4.0	Scale Instrumentation	4-1
4.1	Introduction	4-1
4.2	Load Cell, Cable, and Junction Box	4-1
4.3	The Load Cell	4-1
4.4	The Cable	4-1
4.5	The Junction Box	4-2
4.6	The Power Supply	4-3
4.7	The Transducer Power Supply	4-3
4.8	Analog Instrumentation	4-5
4.9	Signal Conditioning	4-5
4.10	Balancing the Bridge	4-5
4.11	Tare Resistor Calculations	4-5
4.12	Zero Arm Resistor Calculations	4-6
4.13	The Pre-Amplifier	4-7
4.14	The Auto-Zero Trigger	4-7
4.15	The Filter and Buffer Amplifier	4-8
4.16	The Readout	4-8
4.17	Digital Indicators	4-8
4.18	A/D Converter	4-9
4.19	The Dual Scope Converter	4-10
4.20	The Counter and Latch	4-11
4.21	The Digital Display	4-11
4.22	Microprocessor Instrumentation	4-13
4.23	The Microprocessor System	4-13
4.24	The Central Processing Unit	4-13
4.25	The Program Memory	4-14
4.26	Data Memory	4-15
4.27	Special Features	4-15
4.28	Motion Detection	4-15
4.29	Check-Calibration Circuit	4-15
4.30	Electronic Zeroing	4-16
4.31	Auto Zero Tracking	4-16
4.32	Bridge Linearization	4-16
4.33	Analog Outputs	4-16
4.34	Digital Outputs	4-17

## CHAPTER 5

5.0	System Troubleshooting and Calibration	5-1
5.1	Introduction	5-1
5.2	Mechanical Structure	5-1
5.3	Physical Restraints	5-1
5.4	Environment	5-1
5.5	Visual Inspection	5-1
5.6	System Calibration	5-2
5.7	Electronic Calibration	5-2
5.8	Calibrated Material Transfer Method	5-2
5.9	Dead-Weight Method	5-2
5.10	Dead-Weight/Material Substitution Method	5-3
5.11	Troubleshooting	5-3
5.12	Manufacturer's Defects	5-3
5.13	Installation or Maintenance Errors	5-3

SECTION		PAGE
5.14	Component Failure	5-4
5.15	Troubleshooting/Basic Techniques	5-4
5.16	Component Isolation	5-4
5.17	Successive Approximation	5-4
5.18	Troubleshooting/General Procedure	5-4
5.19	Collect Information	5-4
5.20	Inspect the Equipment	5-4
5.21	Make Operational Checks	5-4
5.22	Follow Standard Test Procedures	5-5
5.23	Make Necessary Repairs	5-5
5.24	Demonstrate Correct Operation	5-5
5.25	Troubleshooting/Ten Step Procedure	5-5
5.26	Workmanship Standards	5-7
5.27	Installation/Assembly of Components	5-7
5.28	Readability of Component Markings	5-8
5.29	Lead Forming	5-8
5.30	Number of Wires/Leads per Terminal	5-9
5.31	Component Part Mounting and Support	5-10
5.32	Wire Preparation	5-10
5.33	Stripping	5-10
5.34	Tinning	5-11
5.35	Twisted Pair Wire	5-11
5.36	Lugging	5-11
5.37	Splicing	5-11
5.38	Identification Requirements	5-11
5.39	Readability of Wire Markings	5-11
5.40	Lacing	5-11
5.41	Service Loops	5-12
5.42	Soldering	5-13
5.43	Cleaning	5-13
5.44	Tinning	5-13
5.45	Flux and Cleaning Agents	5-13
5.46	Soldering to Terminals	5-13
5.47	Turret Terminals	5-13
5.48	Slotted Terminals (Bifurcated)	5-13
5.49	Hook and Pierced Terminals	5-14
5.50	Cup Terminals	5-14
5.51	Feed-thru Terminals	5-14
5.52	Strip Gap	5-14
5.53	Stress Relief for Mounted Leads	5-14
5.54	Terminating Large Diameter Wire	5-14
5.55	General Soldering Practices	5-14
5.56	Component Part Mounting	5-17
5.57	Soldering Printed Circuit Boards	5-17
5.58	Mechanical Assembly	5-18
5.59	Eyelets and Standoff Terminals	5-18
5.60	Connectors	5-18
5.61	Quality Assurance	5-18

#### CHAPTER 6

6.0	Overview of Electronic Weigh System	6-1
6.1	Introduction	6-1
6.2	High Accuracy Weigh Systems	6-1